

**Timbertex<sup>®</sup>**

# **Sell Sheet**

(RESHR102)

Updated: 2/16



*Quality You Can Trust...From  
North America's Largest Roofing Manufacturer!™*

***[gaf.com](http://gaf.com)***

# TIMBERTEX<sup>®</sup>

Premium Ridge Cap Shingles

Learn about  
Ridge Cap  
Shingles

*The Perfect Finishing Touch  
For Your New Roof Should Be  
A Protective And Distinctive*


# Ridge Cap Shingle

## A Distinctive And Protective Premium Ridge Cap Shingle Will:

- Match the performance of your new roof (unlike using typical 20- or 25-year cut-up strip shingles as your ridge cap)
- Accentuate the natural beauty of your newly installed architectural shingle roof (or even add dimension and depth to a strip shingle roof)
- Offer multi-layer protection at the highest-stress areas of your roof (the hips and ridges)
- Provide a striking and higher-quality alternative to using cut-up strip shingles as your ridge cap

Timbertex<sup>®</sup> Premium Ridge Cap Shingles are a key part of the GAF Lifetime Roofing System and have even earned the prestigious Good Housekeeping Seal (applicable in U.S. only; see reverse).

## Multi-Layer Protection For Your Home

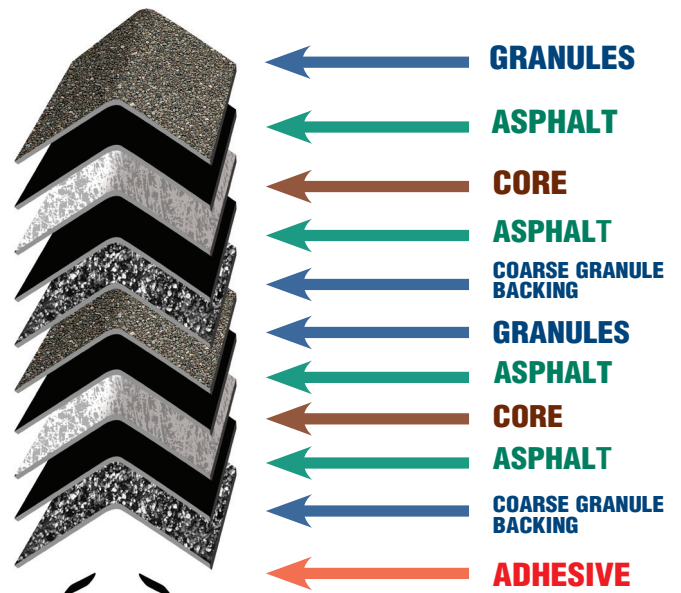

[gaf.com](http://gaf.com)

# TIMBERTEX®

## Premium Ridge Cap Shingles

**Your Best Choice:**

- ✓ Up to a Lifetime Ltd. warranty on Lifetime Shingle roofs!\*
- ✓ The perfect finishing touch for your GAF roof

### Homeowner's Best Choice

- **Dramatic Look...** Extra-thick, double-layer design with massive 8" (20 cm) exposure is up to 195% thicker than strip shingles for a distinctive, upscale look
- **The Right Colors...** Unlike cut-up strip shingles, Timbertex® Premium Ridge Cap Shingles are factory designed to complement the color of GAF laminated shingles
- **Stays In Place...** Dura Grip™ Self-seal Adhesive seals each piece tightly and helps reduce the risk of shingle blow-off
- **StainGuard® Protection...** Helps ensure the beauty of your ridge cap shingles against unsightly blue-green algae\*
- **Peace of Mind...** Up to a Lifetime Ltd. warranty when installed on Lifetime Shingle roofs\*



Note: See [www.gaf.com/ridgecapavailability](http://www.gaf.com/ridgecapavailability) for regional availability.

### See What Timbertex® Can Do For Your Roof!



### Professional's Best Choice

- **Easier to Install...** Improved pre-scored design makes hand-tearing pieces easier than ever—no cutting on the roof!
- **Saves Time...** Timbertex's 8" (20 cm) exposure means fewer pieces to install (vs. typical cut-up strip shingles)
- **Versatile...** 12" (30 cm) wide design fits easily over the most common-size ridge vents

### Fast & Easy Installation!



More Than Just Coverage On Your Shingles!

Get Automatic Lifetime Protection On Your Entire GAF Roofing System!\*

When you install any GAF Lifetime Shingle and at least 3 qualifying GAF accessories, you'll automatically get:

- A Lifetime Ltd. warranty on your shingles and all qualifying GAF accessories!\*
- Non-prorated coverage for the first 10 years\*



LIFETIME SHINGLES COBRA ATTIC VENTILATION ROOF DECK PROTECTION LEAK BARRIER STARTER STRIP SHINGLES RIDGE CAP SHINGLES

### Nominal Product Specifications

- 8" (20 cm) exposure
- Approx. 12" (30 cm) wide
- Each bundle covers approximately 20 lineal feet (6 lm)
- 5 bundles cover approximately 100 lineal feet (30 lm)
- 150 pieces per 100 lineal feet (30 lm) of coverage
- Approx. 2 nails per piece
- UL 790 Class A fire rated
- Meets ASTM D3161 Class F; ASTM D3018 Type 1; and ASTM D3462†
- CSA A123.5
- Miami-Dade County Product Control approved
- Florida Building Code approved
- ICC-ES ESR-1475



†Periodically tested by independent and internal labs to ensure compliance with ASTM D3462 at time of manufacture.



\*See GAF Shingle & Accessory Ltd. Warranty for complete coverage and restrictions. The word "Lifetime" refers to the length of coverage provided by the GAF Shingle & Accessory Ltd. Warranty and means as long as the original individual owner(s) of a single-family detached residence (or the second owner(s) in certain circumstances) owns the property where the shingles and accessories are installed. For owners/structures not meeting the above criteria, Lifetime coverage is not applicable. Lifetime Ltd. Warranty on accessories requires the use of at least three qualifying GAF accessories and the use of Lifetime Shingles.



The GAF Lifetime Roofing System has earned the prestigious Good Housekeeping Seal, which means that Good Housekeeping stands behind the products in this system. (Refer to Good Housekeeping Magazine for its consumer protection policy. Applicable in U.S. only.)



[gaf.com](http://gaf.com)