

YOU REALLY CAN DO SOMETHING ABOUT THE WEATHER

ULTIMATE HIGH-PERFORMANCE GLASS

Three layers of silver make the clear difference. A clear coating that blocks even more solar gain, it reflects the heat and lets the light stream in.

KEEP THE VIEW – BEAT THE HEAT

When the temperature soars, ordinary window glass cannot handle the heat. And tinted glass spoils the view. Our glass has been specially formulated to reject the sun's heat without affecting the view. It lets more light in and keeps more heat out. So your home stays cool and comfortable. What's more, over 95 percent of the sun's damaging ultraviolet rays are blocked.



In the summer, Low-E glass reduces heat gain from the sun to help keep homes cooler.


THE PERFECT COLD REMEDY TOO

The superior insulation capability of our high-performance glass is a key factor in the construction of comfortable windows for cold climates. The dramatic comfort improvement from windows with warm glass surfaces also means the relative humidity of the indoor air can be controlled and maintained properly.



In the winter, Low-E glass lets the warm, solar rays in while blocking the heat in the home from getting out.

OUR WARM-EDGE GLASS SYSTEM: IT'S WHAT GIVE US OUR COMFORTABLE EDGE.

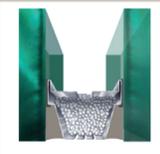

- 7/8" insulated glass panel provides an optimum, tightly sealed air space that acts as a highly effective noise buffer and keeps inside air from escaping and outside air from penetrating
- The most durable spacer system made of patented stainless steel and suitable for all climates. Aesthetically pleasing with no visible screws and tested best in class against seal failure.

Gold Edition
Affordable with No Sacrifice in Quality.



- Dual vent locks
- Allows window to remain partially open
- Prevents further opening of window from the outside



- Balance cover
- Provides a complete finished look



- Metal reinforced lock and keeper rail
- Provides strength and rigidity



Heavy-Duty
Pic Resistant
Cam Locks



- Tilt-in sashes
- Easy to clean from the inside – anytime of the year



Multichambered
Fusion-Welded
Frame and Sash

WARRANTIES

Each premium vinyl replacement window comes with a standard **Lifetime Warranty** on the vinyl and all working parts as well as a lifetime warranty against glass breakage. And throughout the warranty period, you can easily obtain replacement parts because each unit is individually registered, with a warranty identification number prominently displayed on a special sticker for your convenience. refer to this ID number when you call to order new parts.

Standard Lifetime Glass Breakage Warranty Insures you against any accident, mishap or unforeseen future breakage.

25/2013 20131201-1 Columbus Window & Do
- SCREEN IN-HT-SC-Screen HT/DISPLAY(3 1 of 1
2896 B:4 27 W X 46.375 H
n: 1 0:BE, BR, FS, UV A:WTYPE=DH
vit: 12

YOUR ASSURANCE OF QUALITY

Thrush & Son: Complete Home Improvement Company partners with objective, third-party organizations that continuously test our products and verify that we meet the highest standards of performance, quality and safety.



The Eclipse Integrity Awards are presented to businesses featuring strong leadership and team members. Their leadership is committed to ethics, building a culture of high character ethics and unifying team members around ethical practices. The team is dedicated to performance management practices, ethical human resource practices and committed to the community as demonstrated by their community service and support of the BBB ideals.



Every window and door that boasts AAMA certification undergoes extensive independent testing for resistance to water leakage, air pressure, and impact.



The National Fenestration Rating Council establishes test criteria that set the standard for performance ratings for manufacturers of window and door products.



The advanced components and design used in our Heritage and Insulator Windows exceed all criteria required by the ENERGY STAR program.

SINCE 1960
Thrush & SON^{LLC}
Complete Home Improvement
CO

www.YourWindowTeam.com
www.ThrushAndSon.com
888.349.8889

PREMIUM VINYL WINDOWS

SINCE 1960

Thrush & SON^{LLC}
Complete Home Improvement
CO





THE VIEW YOU'VE BEEN MISSING

At Thrush & Son: Complete Home Improvement our integrity and reliability is the threshold of our business. Listening to our customer's individual needs, providing complete information, and making recommendations based on our experience provides for solid relationships. And because our customers are our biggest referrals, we value those relationships. Typically we are the low bid, but our quality and reputation for outstanding installations is award winning. Our installers and project reps average 20 years experience. We hope you will consider us for your next project.



SLIDER WINDOWS

Horizontal sliding windows are available in 2- and 3-Lite styles. The solid vinyl frames glide smoothly, and take-out sashes mean easy cleaning. Interlocking meeting rails ensure extra snugness. Virtually maintenance-free, they never need painting. Three section sliders are available in 1/3, 1/3, 1/3 or 1/4, 1/2, 1/4 styles.

BAY & BOW WINDOWS

Bay and Bow windows are custom made to exact size with furniture grade oak or birch. The head and seat are insulated to provide superior thermal performance. Adjustable turn-buckle cabled hanging system is anchored at the top, thereby eliminating the need for unsightly external braces. Exterior cladding is maintenance-free. Hip roof is shingled to match residence. Available in 3 to 6 Lites in many colors and window shapes.



GARDEN WINDOWS

Turn your home into an atrium with a Garden Window. They have easy access to locks and operators, a reinforced sash and multi-point locks for safety.



CASEMENT & AWNING WINDOWS

- Beveled exterior sash design creates the appearance of a larger glass area with an attractive slimline look.
- State-of-the-art hinge system offers multi-directional ventilation and allows sash cleaning from inside the home.
- Positive crank mechanism allows easy operation when opening and closing the sash.
- Multi-point locking system ensures a tight fit and added security.
- Combine awning and fixed-lite windows to add striking beauty and increased visibility.



Functional and stylish, this sleek fold-away crank handle won't get caught up in blinds or curtains.

Basement windows are custom made with a full screen; fusion-welded main- and sash-frame.

ENERGY EFFICIENT • LOW-MAINTENANCE • BEAUTIFUL • ENVIRONMENTALLY FRIENDLY

Diamond & Platinum Edition

The Ultimate in Quality, Performance and Design.

If you consider yourself a discriminating homeowner with a well-honed appreciation for craftsmanship and detail, Thrush & Son: Complete Home Improvement recommends the unparalleled performance and aesthetic appeal of our Heritage Series premium windows.

In addition to the tried-and-true Heritage benefits of durability, low maintenance and high energy efficiency, the Heritage Series windows showcase elegant and innovative details that represent the ultimate in quality and performance in vinyl replacement windows. And with a wide variety of traditional and custom styles and shapes, our windows are sure to enhance any home, from rustic ranch to classic Georgian.



- 1/4 round finished look
- The look of hand-crafted wood windows



- Magna Seal
- Ultra tight magnetic seal
- Keeps the cold out



- Composite reinforced lock and keeper rail
- Provides strength and rigidity - 730 times better than aluminum
- Non-conductive



- Dual Tech Latch 'n Lock™
- Incorporates lock and tilt into same hardware - eliminating separate sash lock
- Simple swing of lever disengages lock
- Full swing tilts window in



FEATURES

FEATURES	BENEFITS
1. Multichambered fusion-welded main & sash frame	Increases strength and energy efficiency while creating a weather-tight corner
2. Stepped-down jamb	Improves structural strength
3. Truly sloped sill	Keeps water outside, no need for weep holes
4. Beveled exterior with integral drip cap	Aesthetically pleasing; keeps glass cleaner
5. Recessed accessory groove	Attractive appearance of muller windows
6. Double-barrier finseal weather stripping	Tight seal - prevents air and water infiltration
7. 7/8" insulated glass	Superior thermal performance; sound deadening
8. Self-adjusting stainless steel clock spring balance system (constant force)	Strongest in industry; allows homeowner to effortlessly raise and lower sash
9. Bulb seal	Creates an ultra-tight seal; prevents cold air infiltration
10. Polyurethane foam filling	Adds insulation value - restricts heat and cold transfer
11. Magna Seal	Magnetic seal like a refrigerator door
Overlapping double wall sill dam leg	Eliminates potential air and water infiltration

CUSTOMIZE, DECORATE AND COLORIZE

COLORS*

Exterior & Interior



WOODGRAIN*

Interior Only

(Soft white exterior not available with woodgrain interior)



GRIDS

- Available flat, contoured, brass pencil, colonial, diamond, prairie, and double prairie
- Placed between the panes of glass for a smooth elegant appearance



V-GROOVE GLASS

- Decorative cut glass pattern
- Available three ways: frosted, polished, and mixed
- Available in five patterns: colonial, prairie, diamond, double prairie, and decorative



PRIZM - EXTERIOR ACRYLIC COATING

- 10 different colors* standard (custom color matching available by request)
- An acrylic co-polymer coating with reflective pigments to minimize heat absorption
- No chipping or peeling
- AAMA certified
- Lifetime warranty



*Colors and woodgrains are not an exact match. Refer to samples for accurate color match.

